



Deluxe 16.2 & 20 cu.ft. Chest Freezer



MCF162W | MCF200W

Congratulations on the purchase of your new Marathon Freezer!

To activate your Warranty, please register your appliance at www.stirlingmarathon.com or by completing and mailing the enclosed Warranty Registration Card. We are confident you will have years of hassle-free enjoyment and ask that you please retain the Use & Care Guide for future reference and your safety.

Before installing please, read your Use & Care Guide carefully and pay special attention to the Safety & Warning information outlined in the following pages.

For immediate assistance: 1-844-309-9777
www.stirlingmarathon.com

Important Safety Information

⚠️ WARNING ⚠️

SUFFOCATION HAZARD AND RISK OF CHILD ENTRAPMENT

Before installing please read your Use & Care Guide carefully and pay special attention to the Safety and Warning information outlined in the following pages.

To avoid the possibility of child entrapment, please take the following precautions before throwing out the refrigerator

- Remove the door from the unit.
- Leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the refrigerator.

Before first use

Before connecting the refrigerator to an electrical power supply, let it stand upright for approximately 4 hours to let the refrigerant settle in the compressor. This will reduce the possibility of malfunctions in the cooling system due to transportation. Please wipe and clean the interior of the refrigerator thoroughly with a damp, non-abrasive cloth.

Model Description

1. Handle
2. Safety Lock
3. Freezer Lid
4. Freezer Baskets (6)
5. Thermostat
6. Wheels
7. Defrost Drain



Installation

Adequate air circulation should be around the appliance to prevent overheating. Please Keep at least 4" on both sides and 36" at the top of the freezer for ventilation, easy access and removal of the freezer baskets.

- The appliances must not be located close to radiators or cookers.
- Make sure that the main plug is accessible after the installation of the appliance.

 **WARNING!** The electrical outlet must be easily accessible after installation in the event you need to disconnect the refrigerator from the main power outlet.

Before plugging your chest freezer, ensure that the voltage and frequency shown on the rating plate correspond to your power supply. The appliance must be "grounded" and the power cord plug is provided with a "ground" for this purpose.

If the power supply is not "grounded", connect the refrigerator to a separate "ground" in compliance with local and Federal regulations after consulting a certified electrician. The manufacturer declines all responsibility if the above safety precautions are not observed. This appliance complies with the E.E.C. Directives.

Care and Cleaning

For hygienic reasons the interior of the appliance, including accessories, should be cleaned regularly.

 **CAUTION!** The appliance must not be connected to power while cleaning. Danger of electrical shock!


Before cleaning switch the appliance off and remove the plug from the outlets, or switch off or turn off the circuit breaker or fuse. Never clean the appliance with a steamer cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapours can lead to damage to plastic parts. The appliance must be dry before it is reconnected to a power supply.

 **IMPORTANT!** Ethereal oils and organic solvents can attack plastic parts, e.g. lemon or orange juice, butyric acid, a cleanser that contains acetic acid.


- Do not allow such substances to come into contact with appliance parts.
- Do not use any abrasive cleaners or brushes.
- Remove the food from the freezer. Store them in a cooler place, well covered.
- Switch the appliance off and remove the plug from the outlets, or turn the circuit breaker or fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm soapy water. After cleaning wipe with fresh water and rub dry.
- The appliance must be completely dry before reconnecting to a power supply.

Installing the casters


1. Place the chest freezer on the floor to facilitate the installation or removal of casters. (Please protect the back of the chest freezer to avoid any scratch)

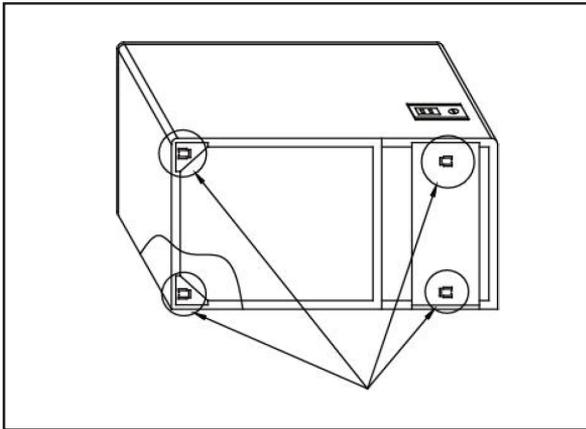


2. Remove the screws at the bottom four corners of the chest freezer.

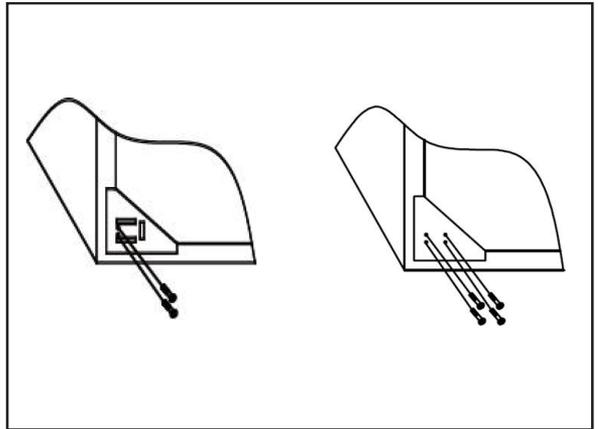

3. Remove the casters from the bag and insert them into the slot at the bottom corner of the refrigerator or onto the mounting holes.

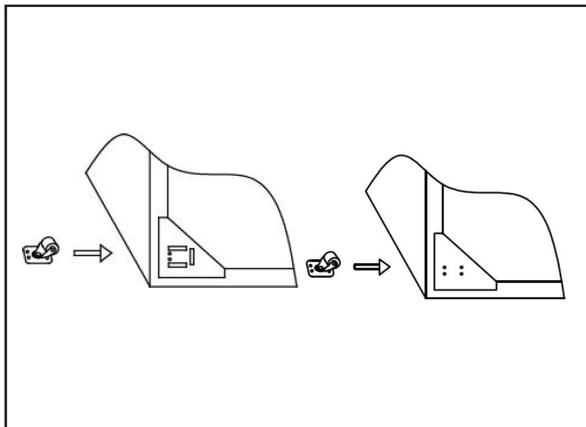


4. Align the holes on the casters with the holes in the case, install and tighten the screws.

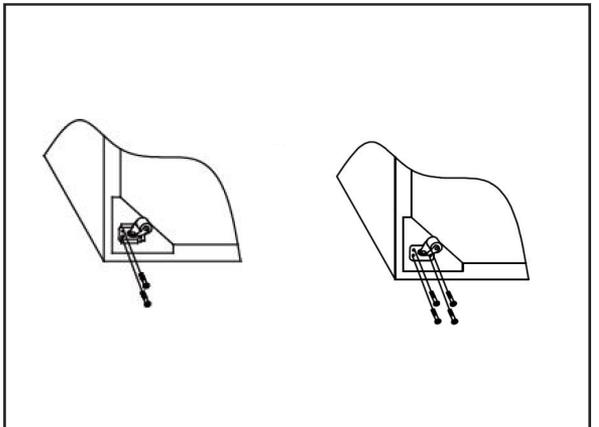


Installing the handle


1. Fix the handle on the door with four screws.

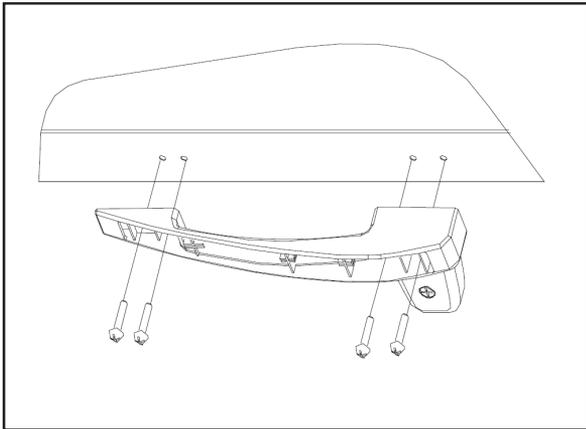


2. Insert the one side of handle cover into the handle pedestal.

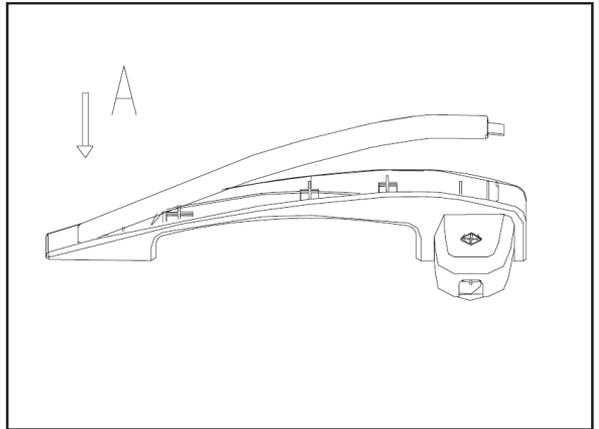

3. Insert the other side of handle cover into the handle pedestal.

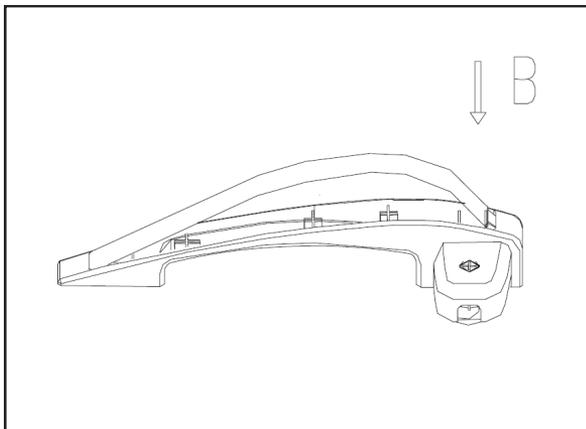

4. Press the cover into the handle pedestal.

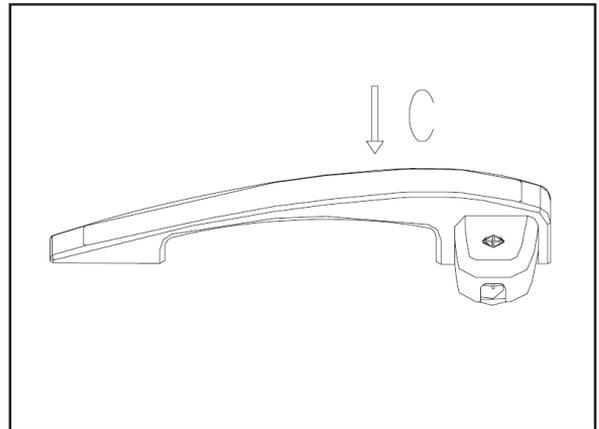

Installing the lock hook



1. Remove the lock hook and two screws from the accessories bag.
2. Using the two holes already in the freezer, attach the lock hook.

Use and Care

Temperature Settings

Set the desired temperature on the thermostat control knob as follows:
Position 1 - Cold
Position 5 - Colder. Normally set at this position
Position 7 - Coldest

Lights

The green light is the power on light.

The red light indicates when the compressor is running.



Double row storage for easy organization

Our innovative double row basket design allows for multi-level storage of your frozen goods. These baskets can be removed to accommodate larger items and more storage flexibility.



Use and Care

 **IMPORTANT!** In the event of accidental defrosting, for example, the power has been off for a long period, the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).


- Ensure that frozen goods are quickly transferred to the freezer in the shortest possible time.
- Avoid opening the door frequently or leave it open longer than necessary.
- Once defrosted, food should not be re-frozen.
- Do not exceed the recommended storage period indicated on the package or by the manufacturer.
- Frozen food can be thawed in a refrigerator or at room temperature before use.

Defrosting the freezer

The freezer does require periodic defrosting due to frost/ice build-up based on use. Never use sharp metal tools to scrape off frost from the walls of the freezer, as this will cause damage and affect the performance of the appliance.

When the ice build-up becomes thick in the freezer compartment, it is time to defrost your freezer as follows:


1. Remove all contents from the freezer compartment.
2. Set the thermostat dial to "0" to defrost.
3. Unplug the unit. Remove the drain plug from the inside of the freezer.
4. Defrosting usually takes a few hours. To defrost faster keep the freezer lid open.
5. Place a tray underneath the outer drain plug. Pull out the drain dial. Rotate the drain dial 180 degrees to allow the water flow out of the freezer and into the tray

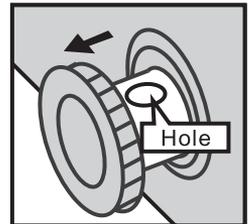

Note: Monitor the tray under the drain, emptying as required to avoid water overflowing

When done, rotate the drain dial 180 degrees and push it back into the cabinet

- Wipe the residual moisture out of the freezer and replace the electrical plug in the electrical outlet.
- Reset the temperature control to the desired setting.

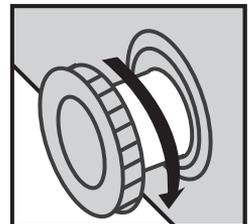

Troubleshooting

You can solve many common refrigerator problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling for service.

 Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is no in this manual.

Important ! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
The appliance does not work.	The plug is not plugged in or is loose.	Re-insert the power cord.
	The fuse has blown or is defective.	Check the fuse, and replace it if necessary.
	The electrical outlet is defective or controlled by a light switch.	Check if the power is controlled by a light switch or contact an electrician.
The appliance freezes too much.	The temperature is set too cold or the appliance runs in MAX settings.	Turn the temperature regulator to a warmer setting temporarily.
	The temperature is set too cold or the appliance runs in MAX settings.	Please look at the initial Temperature Setting section.
The food is not enough frozen enough.	The freezer lid was not close properly.	Ensure the freezer lid is closed correctly.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look at the installation location section.
Heavy build-up of frost on the door seal.	The freezer lid or gasket does not seal properly.	Warm the leaking carefully section of the door seal with a hairdryer (on a cool setting). At the same time shaped the warmed door seal by hand, such as it sits correctly and the lid closes.
		Adjust the hinges.
Unusual noises.	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.

If the issue persists after completing the steps provided above, contact the Stirling Marathon Service Center.



2 Years Limited Warranty

When operated and maintained according to the instructions in the Use & Care Guide, MARATHON a registered trademark of Stirling Marathon Limited agrees to repair or replace this product for 2 years from the date of original purchase and/or agrees to pay for parts and service/labour required to correct defects in materials or workmanship. Any Service must be approved and provided by an Authorized Stirling Marathon Service provider. YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AT THE SOLE DISCRETION OF STIRLING MARATHON LIMITED AS PROVIDED HEREIN. This limited warranty is valid only in Canada and the Continental United States with proof of original purchase and confirmed warranty registration.

TERMS OF WARRANTY BY PRODUCT	Capacity/Type	Warranty Type
Refrigeration & Freezer	Less than 6 cu.ft	Carry-In
Refrigeration & Freezer	Greater than 6 cu.ft.	In-Home
Electric & Gas Ranges	All Sizes	In-Home

How to Obtain Service

Carry-In: The original purchaser must deliver or ship the defective product to an authorized Stirling Marathon Service present a copy of the original bill of sale or Warranty Registration Confirmation.

In-Home: Contact Authorized Service Center and provide a copy of the Original bill of sale or Warranty Registration Card. If you are in a remote area or the closest Authorized Service Center is further than 100 km (60 miles), you will be required to deliver the appliance to the closest Service Center at your expense.

Stirling Marathon is not responsible or liable for any spoilage or damage to food or other contents of this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

Items Excluded from Warranty

- Damages due to shipping or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Commercial or Rental Use Limited to 90 days Parts & Labour.
- Plastic parts such as door bins, panels, door shelves, racks, light bulbs, etc.
- Punctures to the evaporator system due to improper defrosting of the unit.
- Service or Repair by a unauthorized service technicians.
- Service calls that do not involve defects in material and workmanship such as instruction on the proper use of the product, door reversal or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Delivery costs incurred as the result of a unit that fails.
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an unauthorized service technician is not available.
- The removal and reinstallation of your appliance if it is not installed correctly or is in an inaccessible location, as per the published installation instructions.
- Liability under this warranty is limited to repair, replacement or refund. If a replacement unit is not available or the unit cannot be repaired, liability is limited to the actual.
- Purchase price paid by the consumer.
- This warranty applies only to the original purchaser and does not extend to any subsequent owner(s) and is non-transferable.
- No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following: accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions (extremely high or low room temperature).
- Use for commercial or industrial purposes (i.e. If the appliance is not installed in a domestic residence). Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- Service calls resulting in customer education.
- Improper installation (ie. Building-in of a free-standing appliance or using an appliance outdoors that is not approved for outdoor application).

For Service or Assistance please contact us at:
warranty@stirlingmarathon.com or visit us at www.stirlingmarathon.com.